



CSR75 Floor Sweeper Instruction Manual

We aim to provide safer, higher-end and more user-friendly cleaning equipment with the help of the newest technology and innovative ideas.

Preface

This instruction manual contains all the information that you need to use and maintain the machine. Please read it carefully before getting started. Only with correct operation and regular maintenance can the machine be kept in its best working condition

This instruction manual is an important part of the product and should be kept together with the machine.

In this manual we use illustrations to show the components and functions of the machine. It is possible that some of them contain details that are slightly different from those of yours. However, all the instructions presented here still apply to your product and should be followed strictly during the operation.

Some components of the product may be harmful or dangerous and we have tried our best to include them in this manual. It is the user's obligation to pay special attention to them during the work. However, since it is impossible for us to point out all potential dangers, we expect you to be extremely cautious during the work so as to protect the machine, yourself and other people in the working area.

Only accessories from the original manufacturer can be used on the machine. Using accessories from other sources may lead to low working efficiency or even accidents in extreme cases.


We usually modify or improve our products to meet the latest market demand. However, this is NOT suitable for machines that have been sold. We will NOT be responsible for any injury or loss caused due to the user's improper operation either.

If you have any question, complaint or suggestion, please feel free to contact us and we will be at your service with all our knowledge and enthusiasm.

We wish you a pleasant experience with our product!

Contents

Technical parameters	1
Chapter 1 General description	2/3
1.1 Contents and purposes	
1.2 General instructions	
1.3 Safety requirements for the batteries	
1.4 General safety requirements	
Chapter 2 Operating the machine	4/7
2.1 Buttons and pedals of the machine	
2.2 Operation process of the machine	
2.3 Cautions during the operation	
Chapter 3 Regular inspection and replacement of damaged parts	8/10
3.1 Adjustment and replacement of the main brush	
3.2 Adjustment and replacement of the side brushes	
3.3 Replacement of the filter element	
3.4 Adjustment of the height of the baffles	
3.5 Replacement of the fuses	
Chapter 4 Common problems and solutions	11
Chapter 5 Maintenance	12
Chapter 6 After-sale services	13
Warranty card	14

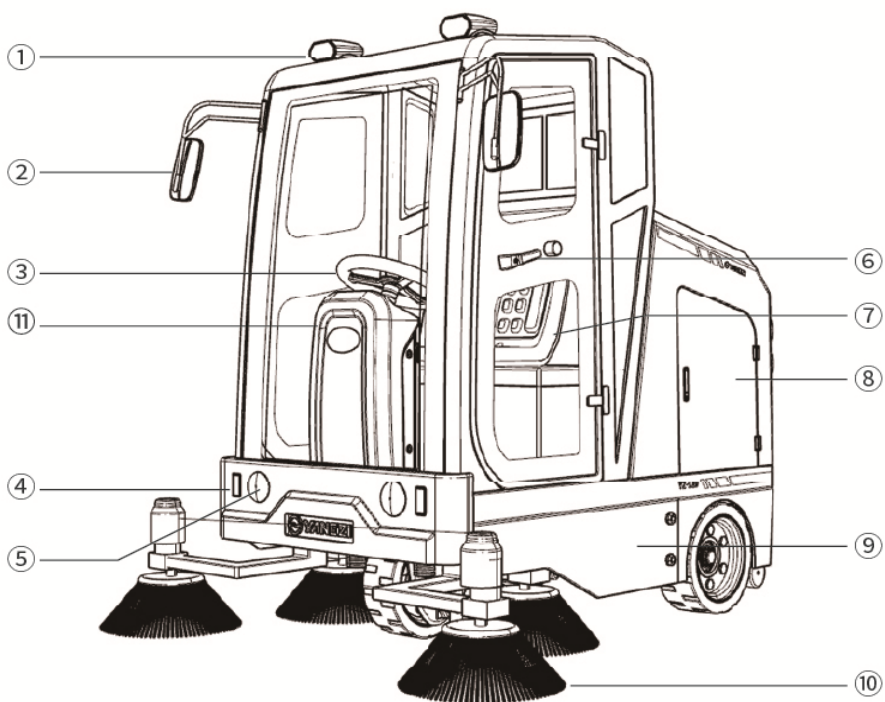

① Flashlight

② Rear-view mirror

③ Steering wheel

④ Turn light

⑤ Flashlight

⑪ Water valve

⑥ Door handle

⑦ Seat

⑧ Inspection hole

⑨ Inspection hole

⑩ Side brush

Technical parameters

Category	Unit	Parameter
Cleaning width	IN	75
Main brush width	IN	28
Side brush width	IN	20 * 4
Cleaning efficiency	ft ² /h	180834
Battery capacity	V/Ah	4*12/4*100
Water tank capacity	Gal	21
Garbage can capacity	Gal	48
Main brush motor power	HP	1.09
Side brush motor power	HP	0.11* 4
Driving motor power	HP	1.61
Suction motor power	HP	0.67
Gross Weight	Lbs	2127
Package size	IN	92.13 * 72.05 * 85.43
Product size	IN	91.7 * 74.8 * 77.17

Chapter 1 General description

1.1 Contents and purposes

- Potential risks concerning the use of the machine are listed in the following sections. Since most accidents take place when safety rules are ignored, it is necessary that you read them carefully and take precautions before getting started. The best guarantee against any accident is a careful and cautious user, which might be better than other precautions available. When using the machine, pay special attention to the people in the working area, especially children.

1.2 General instructions

- Before performing any maintenance and repair, turn off the power and remove the key from the general switch.
- The machine can only be operated by qualified personnel. Children and disabled people are strictly forbidden to use it.
- Keep the battery away from sparks, flames and smoke.
- Do **NOT** use the machine in places with dangerous, flammable or explosive gases, liquids or water vapor.
- The machine can be used to clean regular garbage. It must **NOT** be used to clean silk ropes, belts, high-temperature sundries, accumulated water, or flammable, toxic and harmful materials, so as to avoid entanglement and burning of the brushes.
- Keep loose clothing, hair, fingers and other parts of your body away from the air vent and any moving part of the machine.
- Turn off the power if you do not use the machine.
- Do **NOT** use the machine in slopes with an inclination larger than the fixed value.
- Do **NOT** smoke when charging the battery.
- Do **NOT** use the machine in very dirty places. Repeat the sweeping if there is too much garbage.
- The machine should be stored at a temperature between 14 °F and 104 °F.
- The temperature of the working area should be between 14 °F and 104 °F, and the humidity should be between 30% and 95%.
- Do **NOT** use the machine as a means of transportation.
- When the machine is not moving, stop the brushes to avoid damage to the ground.
- In the event of a fire, use a **POWDER** extinguisher rather than water.

- Maintenance should be performed regularly in order to have ideal sweeping results.
- If some spare parts need to be replaced, you can purchase them from the original manufacturer or an authorized distributor.
- To make sure that the machine is in the proper operating and safety condition, the user or service center must abide by what is stated in Chapter III and Chapter V.
- Attention must be paid even when the machine is about to be dismantled and scrapped. Since some harmful substances (such as batteries, waste oil, etc.) have met the required standards, they should be sent to a specific center for treatment.

1.3 Safety requirements for batteries

- The battery must **NOT** be in a low voltage state; charge the battery **as soon as possible** when the voltage is below **42 V**;
- To avoid electric leakage, keep the battery dry and clean;
- Do **NOT** put metallic objects (such as tools) on the battery to prevent it from being short-circuited and burned;
- The charging room should be well ventilated;
- When the key switch is in the position “ON”, do **NOT** install or remove the battery;
- Before installing or removing the battery, disconnect first the negative wire (-) and then the positive wire (+). When rewiring, pay special attention to the polarity of the battery, as wrong connection would probably damage electrical components;
- Avoid direct contact between the positive and the negative electrodes, because it would cause a large current short circuit, high heat or even a fire.

1.4 General safety requirements

- In addition to what is mentioned in this manual, the general safety requirements must also be observed. Even if you have used a similar product before, we recommend that you read this manual carefully so that you can save much time as well as take precautions to protect the machine and yourself. It is vital that you become familiar with all the accessories and components before turning on the machine. Read our instructions carefully so that you will not be confused when you get started.

Chapter 2 Operating the machine

2.1 Buttons and pedals of the machine

2.1.1 Key controlling buttons of the machine



Voltmeter

Note: when the general switch is turned on, the current voltage of the machine will be displayed; if the voltage is lower than 42V, charge the batteries immediately.



Loudspeaker button



Main light button



Forward/backward button



Sweeping button




Dust-vibrator button



Sprinkler button


Note:

- The sweeping button has three gears: the front gear, the middle gear and the reset gear.
- Do NOT use the dust-vibrator button with the sweeping button turned on.
- Before turning on the sprinkler button, make sure that the sprinkler valve is open; when it is turned off, close the valve to prevent splashes.

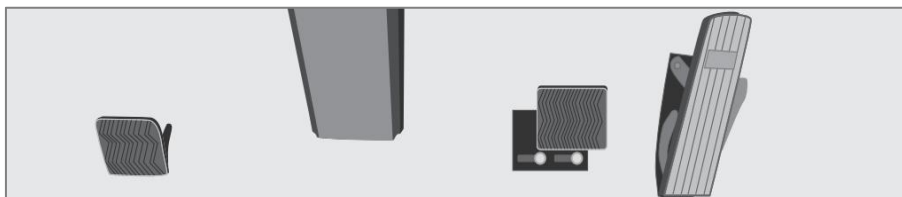

Large garbage pedal


Brake pedal Accelerator pedal

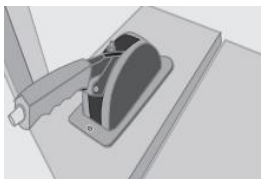

Hand brake: release the hand brake before driving the machine.


2.1.2 Charging the batteries

- Connect the charger to the machine & to a regular 110V wall outlet to charge it. A full charge takes 8-10 hours and the charger will automatically stop charging when the batteries are fully charged.

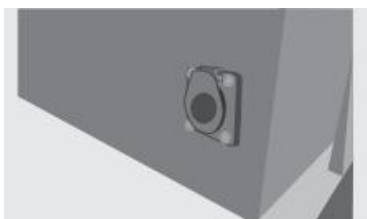

2.1.3 Adding water to the water tank

- Before using the machine, add clean water to the clean water tank. Pay attention to the water quality so that the waterway will not be blocked.

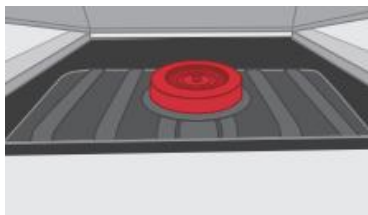

2.2 Operating the machine

2.2.1 Before the operation

- After moving the machine to a new location, make sure that all doors, covers and the garbage can are all properly closed & all parts are connected properly before putting the machine to work.

2.2.2 Power display

- Insert the start key in the steering wheel console and turn the start switch clockwise to the "ON" position. The current voltage of the battery will be displayed in three seconds. If the voltage is lower than 42 V, charge the battery first.

2.2.3 Starting the machine

- Be seated on the driver's seat.
- Step on the brake pedal and turn the start key to the "ON" position.
- Move the machine to the work area using the steering wheel and the forward/backward button.
- The moving speed can be adjusted from 0 to the maximum value by pressing the accelerator pedal.
- Press the sweeping button to start work, and use the steering wheel, accelerator pedal and forward/backward button to move the machine.
- The garbage can must be closed during the sweeping work.
- The sweeping starts automatically just by pressing one button. Three motors (including the main brush motor, side brush motor, and ventilator motor) will automatically start at the same time while the main brush & side brushes descend at the same time.

2.2.4 Stopping the machine

- Release the accelerator pedal to stop the machine.
- Press the stop button and all sweeping functions are stopped, and the main brush and side brushes are raised.
- Turn the start switch to the "OFF" position.

2.3 Cautions

2.3.1 General instructions

- When the brushes are rolling, do **NOT** leave the machine in the same place for a long time, because this would leave unnecessary marks on the ground.
- If you need to remove large light garbage, you can lift the front baffle so that the garbage can be recycled into the garbage can. Note that when the front baffle is lifted, the suction efficiency of the machine will be reduced.
- To achieve the best cleaning effects, the filter screen should be vibrated

regularly: Stop the machine about every 30 minutes, press the dust-vibrator button and keep it on/vibrating for one minute.

- The machine cannot collect garbage when the filter screen is blocked or the garbage can is full. Do NOT use the machine on the damp ground to prevent the filter screen from being damaged.
- The garbage can should be emptied after each cleaning job and whenever it's needed.

2.3.2 Discharging the garbage can

- Release the pedal to stop the machine.
- Remove the buckle of the garbage can.
- Pull the garbage can downward, drag it out and take out the garbage.
- Put the garbage can back in the machine and fasten the buckle.

2.3.3 Push/pull the machine

- Push/pull the machine when it is turned off or when needed.
- Make sure that the speed is not greater than 3.1 mph.
- Press the button to the forward gear when moving the machine forward, and to the backward gear when moving it backward.

2.3.4 Storage of the machine

- If the machine is not to be used within a long period of time, charge the batteries, disconnect the battery cable, and store it in a clean and dry place. Batteries need to be charged monthly to avoid deep discharging which would result in battery failure.


Chapter 3 Regular inspection and replacement of damaged parts

3.1 Adjustment and replacement of the main brush

Note:



The main brush is capable of sending garbage to the garbage can through its own rotation.

3.1.1 Adjusting the position of the main brush

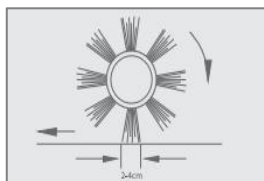

Note:

- Any adjustment must be realized on the flat ground.
- Make sure that the main brush is stopped and the machine is powered-off.
- Check the distance between the brush and the ground when the sweeper is not in use.
- The appropriate range is 0.8-1.6 in. Please adjust the height when needed.

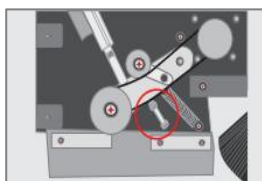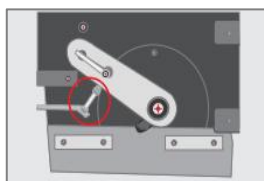

Note:

Use the adjusting nuts on both sides to adjust the position of the main brush.

3.1.2 Replacement of the main brush


When the main brush is seriously worn and cannot work normally, please replace it following the instructions below:

Attention!


Wear gloves so that your hands will not be hurt.

- Step 1: remove the L-shaped screw and the rocker arm of the main brush.
- Step 2: remove the nuts on the side board of the brush to take out the board.
- Step 3: take out the old brush.
- Step 4: install the new brush in the reverse order (the direction of the main brush: the arrow formed by the brush bristles should be pointing toward the front of the machine)


- Step 5: adjust the position of the main brush according to 3.1.1.

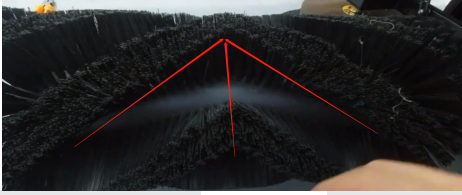


Step 1

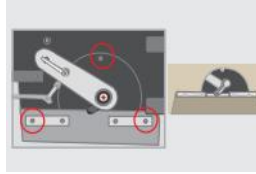

Step 2

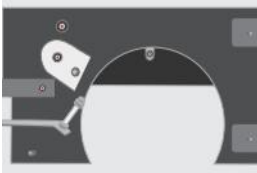


Step 3

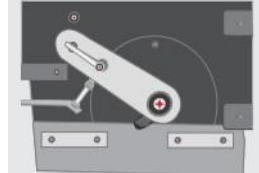


Step 4

The side brushes can sweep out garbage in dead corners so that the cleaning efficiency of the machine can be boosted.

3.2.1 Adjustment of the side brushes

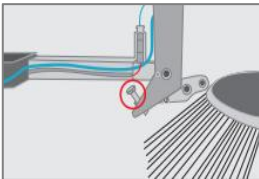

Front side brush adjusting screw

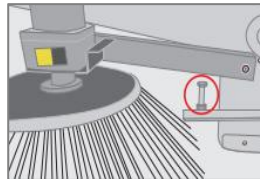


Rear side brush adjusting screw

Note:

Use the adjusting nuts on both sides to adjust the position of the side brushes.

3.2.2 Replacement of the side brushes

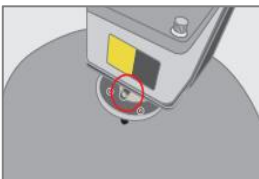

Step 1



Step 2

- Step 1: loose the Allen screws of the side brushes;
- Step 2: remove the screws shown in the picture and tak out the old brush(es);
- Install the new brush(es) by reversing the steps


3.3 Replacement of the filter element

Note:


The filter is used to remove dust and small particles. When dust and high-density garbage such as leaves cannot be cleaned, the filter element needs to be replaced.



Step 1

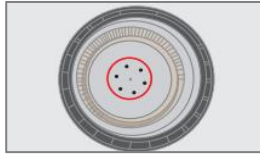

Step 2

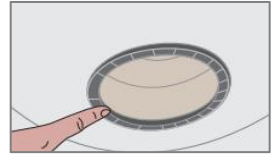

Step 3

- Remove the nuts on the panel of the dust-vibrator motor and pull out the filter element.
- Remove the screws inside the filter element and replace the filter element.
- Apply lubricating oil to the seal of the new filter element.
- Install the filter element in the reverse order.

3.4 Adjustment of the height of the baffles

Note:

The main function of the baffles is to concentrate the suction force of the sweeper. If the side and the rear baffles are off the ground, garbage may be missed during the cleaning.

- Take out the garbage can.
- Check if the baffles are cut or broken. When the gap is larger than 0.8 in or the crack is larger than 0.4 in, replace the corresponding baffle.
- Check whether the distance between the baffles and the ground are 0~0.1 in. Adjust the height of the corresponding baffles when needed.



3.5 Replacement of the fuses

- When an electrical unit is overloaded or the current is too large, the corresponding fuse is blown automatically to protect the unit and the machine.

Chapter 4 Common problems and solutions

Problems	Causes		Solutions
The machine is out of power	The main fuse is blown		Replace the main fuse
	The batteries have no power output		Charge the batteries (Charge the batteries once a month if the machine is not going to be used for a long time)
			Replace the broken batteries
The machine moves abnormally	The driving motor runs well	The chains have fallen out	Reinstall the chains
		The gearbox is broken	Replace the gearbox
	The driving motor runs abnormally	The driving motor is broken	Replace the driving motor
		The driving motor controller is broken	Replace the driving motor controller
		The accelerator panel is broken	Replace the accelerator panel
The main brush does not work	The fuse is blown		Replace the fuse
	The belt of the main brush is broken		Replace the belt of the main brush
	The main brush motor is broken		Replace the main brush motor
The side brushes do not work.	The fuse is broken		Replace the fuse
	The side brush motor is broken		Replace the side brush motor
The brushes do not rise or fall	The fuse of the pushing rod is blown		Replace the fuse
	The relay is broken		Replace the relay
	The pushing rod motor is broken		Replace the pushing rod motor
The cleaning effects are not good	The brushes are worn		Replace the worn brushes
	The brushes are entangled		Remove the entanglements
	The baffle are worn		Replace the worn baffles
	The machines moves too fast		Reduce the speed
	The ventilator has a fault	The ventilator works	Start the dust-vibrating button
		The ventilator does not work	Replace the ventilator
Leaves or large garbage cannot be cleaned completely	The brushes are too high		Adjust the height of the brushes
	The brushes are entangled		Remove the entanglements
	The machines moves too fast		Reduce the speed
Dust or fine ashes cannot be cleaned completely	The filter element is blocked		Clean or replace the filter element
	The baffles are broken		Replace the broken baffles
The garbage moves forward	The front baffle is broken		Replace the front baffle
The brushes become worn very quickly	The brushes are pressed too tightly		Adjust the height of the brushes
	The ground is too rough		No solution available
The garbage can leaks	The sealing strip of the garbage can is broken		Replace the sealing strip of the garbage can
The batteries cannot be charged	The batteries are broken		Replace the broken batteries
	The charger is broken		Replace the charger
	The battery connecting cables are loose		Tighten the loose battery connecting cables
The batteries discharge too quickly	The batteries are not well charged		Charge the batteries
	The batteries are broken		Replace the broken batteries

Chapter 5 Maintenance

Regular maintenance is necessary in order for the machine to be in its best condition, as well as to extend its service life and ensure the operator's safety. The time interval of maintenance can be changed under certain circumstances, but this must be determined by a professional technician.

When performing maintenance, make sure that the machine is turned off and the key is removed from the switch.

5.1 Operating conditions

- Temperature: 14 °F ~ 104 °F
- Relative humidity: 5%~70%
- No electricity-conductive and explosive gases or dust are presented
- No corrosive gases or vapor are presented
- Well ventilated indoor environment

5.2 Maintenance timetable

Items	Upon receiving	Every 10 h	Every 50 h	Every 100 h	Every 200 h	Every 500 h
Height of the brush plates						
Are the brush plates entangled?						
Belt of the main brush						
Dust suction motor and filter element						
Baffles						
Dust-vibrator motor						
Are all nut and screws tightened?						
Degree of wear of the brake						
Degree of wear of the brushes						
Are all the driving chains tightened?						

6.1 General description

-  One-year warranty will be honored on the non-wearable parts. Users can easily purchase the wearable parts (e.g., side brush, main brush and etc.) on our website.
-  The delivery receipt and purchase invoice are certificates for warranty and must be kept properly.

6.2 Cases not covered in the warranty

-  The operator fails to perform maintenance listed in this instruction manual.
-  The surface and/or the structure of the machine are obviously damaged due to improper operation.
-  Disassembly or modification not approved by the original manufacturer.
-  Damage due to weather or force majeure.
-  The warranty is expired or the machine has been used for more than 1,500 hours.

Warranty Card

Property of:		Tel:	
Address:			
Date of purchase:			
Model:		Delivery Date:	
Accessories to be replaced:			
Notes:			

