



C19 Floor Scrubber Instruction Manual

We aim to provide safer, higher-end and more user-friendly cleaning equipment with the help of the newest technology and innovative ideas.

Preface

This instruction manual contains all the information that you need to use and maintain the machine. Please read it carefully before getting started.

This instruction manual is an important part of the product and should be kept together with the machine.

In order to ensure your safety, the following instructions must be followed when operating the machine and performing maintenance:



Do NOT use the machine after drinking or taking medicine.



Turn off the machine before any maintenance or repair.



The machine can only be used by trained and competent personnel; children and disabled people are forbidden to use it.



Do NOT use the machine in places with flammable or explosive liquids, gases and vapor.



When operating the machine, do NOT wear loose clothing, and keep your body away from the moving parts of the machine.



In the event of a fire, use a powder extinguisher instead of water.



It is crucial to give due consideration to the machine's disposal process. If any hazardous substances fail to meet the required standards, they must be transported to a designated service center for appropriate treatment.

If you have any question, complaint or suggestion, please feel free to contact us and we will be at your service with all our knowledge and enthusiasm.

We wish you a pleasant experience with our product!

Contents

Chapter 1 General description

1/3

1.1 Suitable scenes

1.2 Overview of the product

1.3 Control panel and buttons

1.4 List of accessories

1.5 Consumables and optional items

Chapter 2 Unloading and assembling the machine

4/5

2.1 Unloading the machine

2.2 Assembling the machine

Chapter 3 Checks and adjustments before using the machine

6/7

3.1 Check items

3.2 Adjustment of the squeegee

Chapter 4 Instructions on operating the machine

8/10

4.1 Moving the machine



4. 2 Scrubbing the floor	
4. 3 Discharging sewage	
4. 4 Stopping the machine	
4. 5 Charging the batteries	
Chapter 5 Cleaning and maintenance of the machine	11/12
5. 1 Cleaning of the machine	
5. 2 Maintenance of the machine	
Chapter 6 Storage and transportation of the machine	13
6. 1 Storage of the machine	
6. 2 Transportation of the machine	
Chapter 7 Common problems and solutions	14
Chapter 8 After-sale services	15
8. 1 General description	
8. 2 Cases not covered in the warranty	
Technical parameters & Warranty card	

Chapter 1 General description

1.1 Suitable scenes


This product can be used in various locations, such as restaurants, schools, hospitals, factories, supermarkets, warehouses & office buildings, etc. It can clean various hard floors effectively, such as mirror tile floor, marble floor, epoxy floor, PVC floor, emery floor, terrazzo floor, concrete floor, ceramic tile, etc.

1.2 Overview of the product

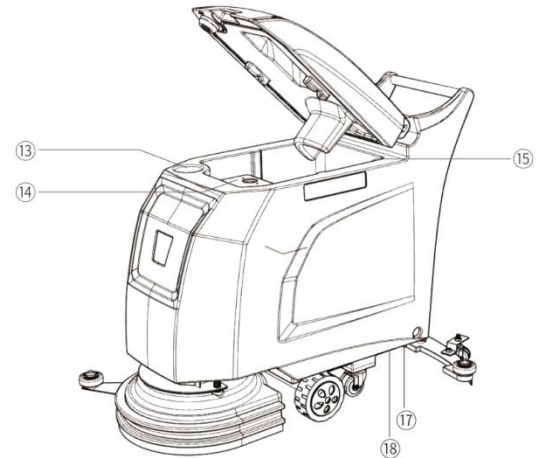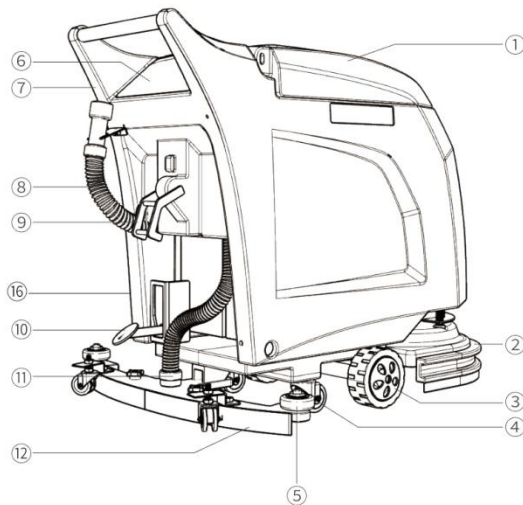

No.	Name	No.	Name
1	Sewage tank cover	9	Squeegee lifting handle
2	Brush plate	10	Brush plate lift pedal
3	Wheel	11	Sewage suction hose
4	Caster wheel	12	Squeegee
5	Anti-collision wheel	13	Clean water inlet
6	Control panel	14	Suction motor
7	Steering handle	15	Sewage inlet
8	Sewage tank drain hose	16	Water level gauge
17	Water valve	18	Water filter

1.3 Control panel and buttons

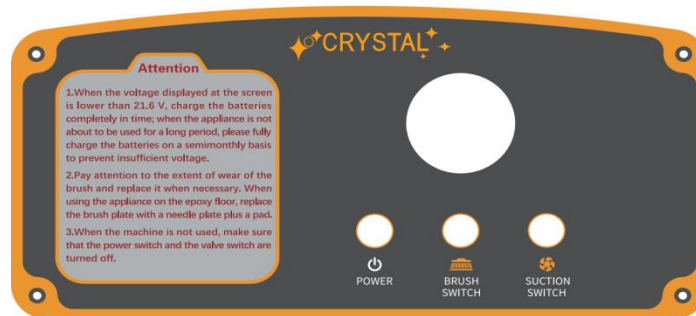

1.4 List of accessories

Upon receiving the product, please verify the presence of the following items. If any items are missing, contact the seller immediately.

Item	Number
Squeegee	1
Instruction manual	1
Red Pad	1
Needle Holder	1
Brush	1
Charger	1

1.5 Consumables and optional items

- ☹ Consumables/Wearables refer to accessories that will wear out gradually and need to be replaced when they cannot perform.
- ☹ You can purchase these wearable parts on our website:<https://www.crystalfloorscrubber.com/frequently-bought-accessories>.

Consumables/Optional items	
Brush plate	Needle holder
Rubber	White Pad
Red Pad	Black Pad

Chapter 2 Unloading and assembling the machine


2.1 Unloading the machine

- ⌚ Remove the packaging carefully to avoid damaging the machine.
- ⌚ We advise you to retain the packaging as it can serve a purpose in the future, such as for machine repairs or transportation needs.
- ⌚ Do NOT unload or unpack the machine violently.

2.2 Assembling the machine

2.2.1 Installing the squeegee

- ⌚ Use the squeegee lifting handle to put down the squeegee holder.
- ⌚ Pass the squeegee fixing screws through the holes of the squeegee holder, and tighten them with plastic knobs:

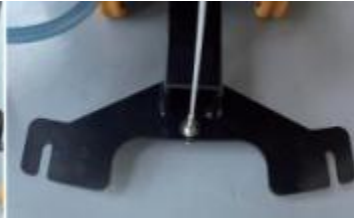

2.2.2 Installing sewage tank drain hose

- ⌚ Remove the cover of the sewage tank and insert the sewage suction hose.
- ⌚ Insert the conical mouth of the suction hose into the hole of the sewage tank, and the other end into the suction port of the squeegee.



Chapter 3 Checks and adjustments before using the machine

3.1 Check items

3.1.1 Checking the water volume in the clean water tank

- ⌚ Make sure that there is sufficient water in the clean water tank before work. Do NOT do the cleaning without enough water, or dust may be sucked into the suction motor leading to loud noise and low working efficiency.

3.1.2 Checking the water level in the sewage tank

- ⌚ Pay special attention to the water level in the sewage tank. When the floating balls are in the highest position, drain the sewage tank immediately or the suction motor will be burned.



3.1.4 Checking the status of wear of the brush plate

- ⌚ Check whether the brush plate is worn. If so, please replace it.



3.1.5 Checking the status of the rubber

- ⌚ The rubber needs to be replaced if it's worn out or cut.
- ⌚ If the rubber cannot create an air tight situation when it's touching the floor, the suction effect will not be satisfactory.



3.2 Adjustment of the squeegee

- ⌚ Use the knobs on the universal wheels to lift up or lower the squeegee holder.



Chapter 4 Instructions on operating the machine

4.1 Moving the machine

- ⌚ When the general switch is turned off, you can push the machine forward after the brush plate and the squeegee are lifted.
- ⌚ When the general switch is turned on, you can push the machine forward when the brush plate and the squeegee are lowered and started.
- ⌚ If you need to pull the machine backward, make sure that the squeegee is lifted or the strip and the sheet metal will be deformed.



4.2 Scrubbing the floor

- ⌚ Put down the brush plate and the squeegee.
- ⌚ Turn on the power switch button.
- ⌚ Turn on the water valve to let the water out.
- ⌚ Turn on the brush plate button and the brush plate begins to rotate.
- ⌚ Turn on the suction motor button and the suction motor begins to work.
- ⌚ Push the machine forward with your hands and start the cleaning job.

Note: when the brush plate motor is turned on, do NOT leave the machine in the same place for a long time, because this would leave unnecessary marks on the ground.

4.3 Discharging sewage

- ⌚ Before discharging the sewage tank, stop the machine and turn off the power switch.
- ⌚ Put down the sewage draining hose, open the cap and discharge the sewage.
- ⌚ Rinse the sewage tank with clean water.



4.4 Stopping the machine

- ⌚ When the work is finished, drain the sewage tank in time.
- ⌚ Move the machine to an appropriate storage place.
- ⌚ Turn off all the buttons on the control panel.
- ⌚ Lift the brush plate and the squeegee.

4.5 Charging the batteries

- ⌚ The total voltage of the batteries will gradually decrease during the work. When the last bar of the voltmeter is flashing, meaning the machine is running out of power and you will need to charge the batteries immediately.
- ⌚ When maintaining the batteries, please wear gloves to avoid contact with acid substances.
- ⌚ Check whether the battery cords are worn and the connecting parts are loose, and replace them when necessary.
- ⌚ Keep the batteries dry and clean and make sure that there are no dust on them, since it is extremely harmful to the batteries and may even cause them to burn in severe cases. Do NOT put any object (especially metallic object) on the batteries either.
- ⌚ In order to extend the service life of the batteries, charge them immediately when the cleaning work is finished. Deep discharging is strictly forbidden for it will reduce their capacity and service life.
- ⌚ The correct steps of charging the batteries: connect the external charger to the plug on the machine first, and then connect the charger to the wall outlet.

Note: if the machine will not be used for a long period of time, please fully charge the batteries, & disconnect the battery cords/lines to avoid power loss. Batteries should be charged semi-monthly to avoid deep discharging which would result in battery failure.

Chapter 5 Cleaning and maintenance of the machine

Regular maintenance can extend the service life of your machine.

5.1 Cleaning of the machine


- ⌚ Check the wheels regularly and remove entanglements.
- ⌚ Clean the sewage tank and the sewage draining hose with clean water regularly.
- ⌚ Clean the filter of the water valve. If you notice any dirt or particles on the transparent cover, you can unscrew the filter and wash the cover and the filter screen repeatedly.

Alert: do NOT wash the machine body with water directly, since it is NOT strictly water-proof and may be short-circuited or burned in this case.

5.2 Maintenance of the machine

5.2.1 Replacement of the brush plate

- ⌚ Park the machine on the flat ground and put down the brush plate.
- ⌚ Rotate the brush plate counterclockwise quickly to remove the brush.
- ⌚ If it gets stuck, grab the bristles to lift the brush plate slightly and shake it from side to side, and then the brush plate will be removed.
- ⌚ When installing the new brush plate, make sure that the flange plate is aligned with the holes on the brush plate, and rotate it clockwise to finish the installation.
- ⌚ Installation of the needle plate: put a pad on the bottom of the needle plate, and install it following the instructions above. You can purchase needle plates and pads on our website.

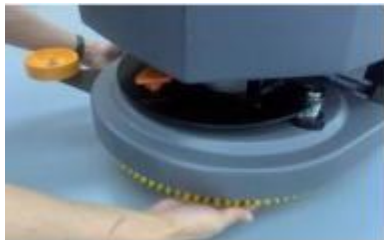

Step 1



Step 2



Step 3

5.2.2 Replacement of squeegee rubber

- ⌚ Lower the squeegee and rotate the two innermost plastic knobs to detach the squeegee assembly from the machine.
- ⌚ Remove the wheels of the squeegee, use a wrench to remove the fixing knobs on the squeegee, and then take out the front strip, the rear strip from the squeegee.
- ⌚ Install the new squeegee rubber and tighten the wheels and the fixing knobs.



Chapter 6 Storage and transportation of the machine

6.1 Storage of the machine

- ⌚ If you do not need to use the machine for a long time, please remove and wash the squeegee and the brush plate, and store them in a dry clean place. We recommend that you store them in an airtight plastic container.
- ⌚ Make sure that the water tanks are drained and cleaned.

6.2 Transportation of the machine

- ⌚ When lifting or lowering the machine, make sure that it is in a stable position to prevent it from tipping over or falling.
- ⌚ When the machine leaves the factory, it is fixed on a wooden pallet and carried on a transport vehicle with appropriate equipment; upon arrival at the destination, a similar setting needs to be arranged to load or unload the machine.
- ⌚ When using a forklift to move the machine, the forklift should move the entire box with the machine well affixed inside it. Do NOT use a forklift to pick up the machine directly or it might damage the machine. Machine could also tip over or fall easily from the forklift and cause property damage or human injury.

Chapter 7 Common problems and solutions

The suction motor does not work	The fuse is blown.	Replace the fuse.
The brush plate motor does not work	The fuse is blown.	Replace the fuse.
No water comes out	The clean water hose is blocked.	Clean the water hose.
	There are impurities in the filter cover.	Clean the filter cover.
	The electromagnetic valve fails.	Check or replace the electromagnetic valve.
Loud noise is produced while sucking up the water	The squeegee is in the wrong position.	Adjust the height of the universal wheels of the squeegee.
	The suction motor is broken.	Replace the suction motor.
The brush plate	The brush plate drops often.	Re-install the brush properly.
	The brush plate buckle is worn.	Replace the buckle.
The water suction efficiency is low	The floating ball is stuck.	Clean the debris near the floating ball and shake it a little to get the ball down.
	The suction hose is blocked.	Clean the suction hose.
	The rubber sealant of the sewage tank is cracked.	Replace the rubber sealant.
	The strip of the squeegee is cracked.	Replace the rubber strip.

8.1 General description

 One-year warranty will be honored on the non-wearable parts. Users can easily purchase the wearable parts (brush, pad, needle plate/holder, squeegee rubber, etc.) on our website.

 The delivery receipt and purchase invoice are certificates for warranty and must be kept properly.

8.2 Cases not covered in the warranty

 The operator fails to perform maintenance listed in this instruction manual.

 The surface and/or the structure of the machine are obviously damaged due to improper operation.

 Disassembly or modification not approved by the original manufacturer.

 Damage due to weather or force majeure.

 The warranty is expired or the machine has been used for more than 1,500 hours.

Technical parameters

Category	Battery-Powered
Battery capacity (V/Ah)	2*12=24/ 2*100
Suction motor (Hp)	0.8
Brush plate motor (Hp)	0.74
System voltage (V)	110
Cleaning width (In)	18.5
Brush plate width (In)	18.5
Squeegee width (In)	32.5
Theoretical working efficiency (ft ² /h)	30138
Sewage tank capacity (Gal)	14.5
Clean water tank capacity (Gal)	13.2
Package weight (lb.)	443
Package size (In)	60.24 * 25.98 * 50
Product size (In)	47 * 31.5 * 39

Warranty Card

Property of:		Tel:	
Address:			
Date of purchase:			
Model:		Date:	
Accessories to be replaced:			
Notes:			

